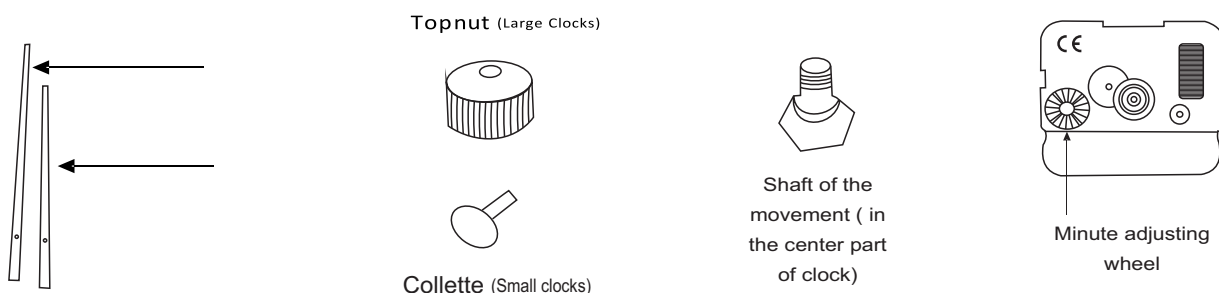


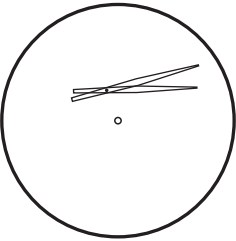
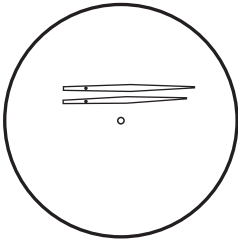
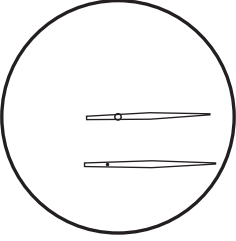
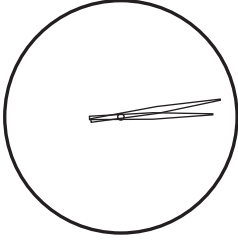
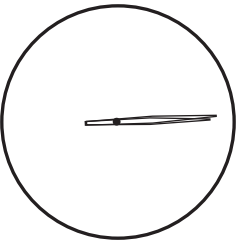
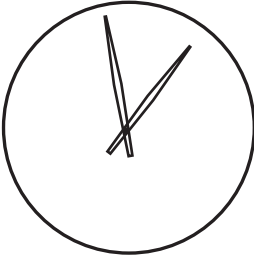
Needle Reassembling Instructions

Note:- DO NOT use your hands to move the needles and set the time.

Parts of wall clock



In case the needles of your wall clock have loosened or come out, please follow the steps instructed below to reassemble.

Step 1 - Separate the two hands and pin from the clock Clock with Top nut - Rotate top nut to remove it Clock with Collette - Pull it out to remove it 1 	Step 2 - Keep the needles and collette separately 2 
Step 3 - Take the hour hand (small needle) and gently push it in Shaft (White circular part on the front of the clock). While fixing the hour hand, make sure that the needle is in the 12.00 hrs position. 3 	Step 4 - Now attach the minute hand (long needle) on the top of the hour hand with a gentle push. There should be a certain gap between both the needles. 4 
Step 5 - Clocks with Top Nut - Now, fix the top nut on top of the needles by rotating it clockwise. Clocks with Collette - Now, fix the collette on top of needles and press it. 5 	6  FINAL FULLY ASSEMBLED CLOCK

Your clock is reassembled now. Use the time adjusting wheels on the back of the clock to set the time. DO NOT use your hands to move the needles and set the time. this will loosen the needles. ALWAYS use the time adjusting wheels to set the clock.

Require one AA battery, battery not included with the clock