

ASSEMBLY INSTRUCTION

Item# - 215708 - Elona

PLEASE READ CAREFULLY AND SAVE THESE INSTRUCTIONS, AS YOU MAY NEED THEM AT A LATER DATE.

WARNING! SHUT POWER OFF AT FUSE OR CIRCUIT BREAKER.

 
All electrical connections must be in accordance with local and National Electrical Code (N.E.C.) standards. If you are unfamiliar with proper electrical wiring connections, obtain the services of a qualified electrician.

GENERAL


Remove all parts and hardware from the box and the mounting package and make sure that none are missing by referencing the illustrations provided.

ASSEMBLY AND INSTALLATION

1. Drill a hole into the ceiling and insert plastic anchor (A). Then screw the hook (B) in clockwise until tight. Now hang your fixture (J) to the hook (B).
2. Connect the fixture to a suitable ground in accordance to local electrical codes. Before connecting the wires, make sure the power is shut off. Connect the wires to the terminals (see diagram below).



3. If you want to adjust the drop length of the fixture you can adjust the wire lock as shown in illustration.
4. Neatly place all the wires.
5. Make sure that the wires do not come into contact with any hot parts of the lamp.
6. Position the canopy (E) onto the ceiling hook. Secure it by firmly tightening the adjustable stud screw (F) to adjust the fixture canopy.
7. Do not turn the power back on until installation is complete.
8. Install 1 (One) light bulb (I) (not included) into the holders (J).
9. Refer to the label on the lamp socket for Max Wattage information.
10. Installation is complete, turn on power at fuse or circuit breaker.

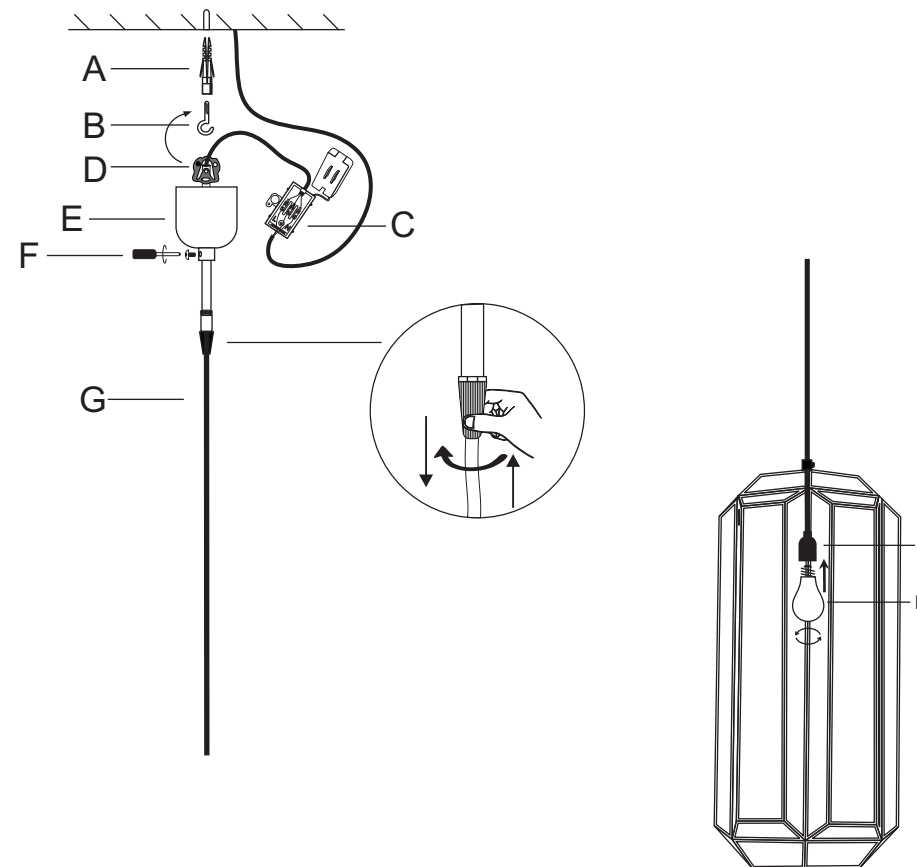

CONTENTS :

- A. PLASTIC ANCHOR (**NOT INCLUDED**)
- B. CEILING HOOK (**NOT INCLUDED**)
- C. TERMINAL BOX (pre-attached to wire)
- D. CEILING CUP HOOK (pre-attached)
- E. CANOPY (pre-attached)
- F. ADJUSTABLE STUD SCREW (pre-attached)
- G. WIRE (pre-attached)
- H. BULB (**NOT INCLUDED**)
- I. BULB HOLDER (pre-attached)
- J. FIXTURE