




JAMES KASTJE





SCHRANK - ARMOIRE - CABINET

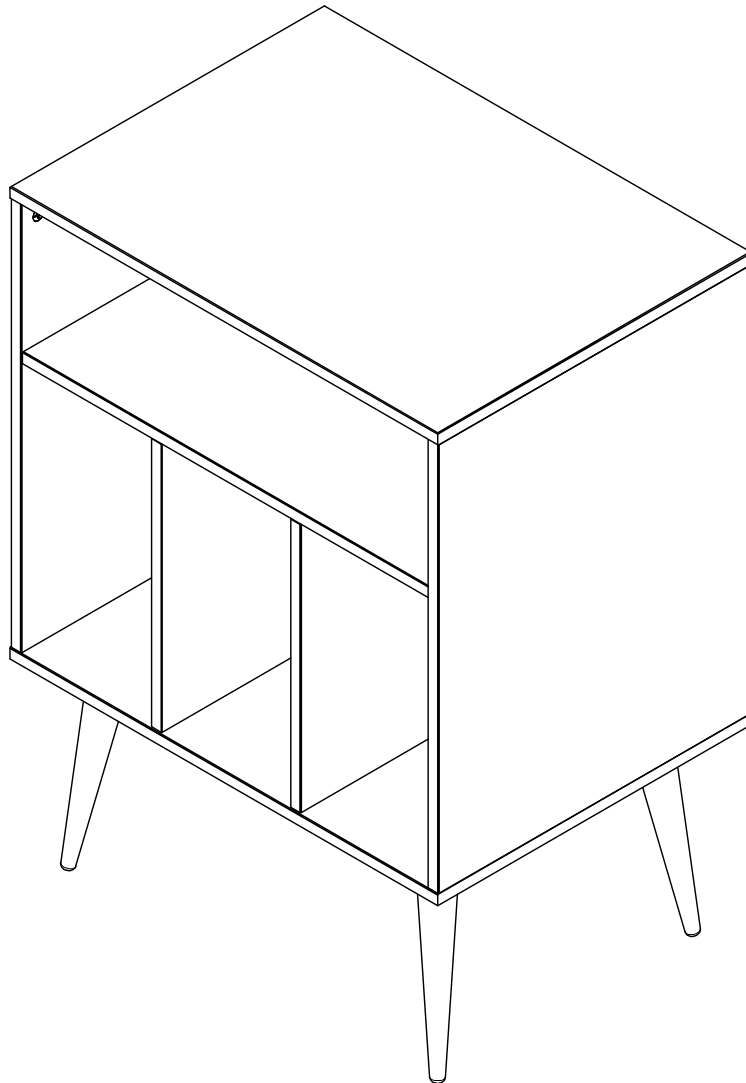

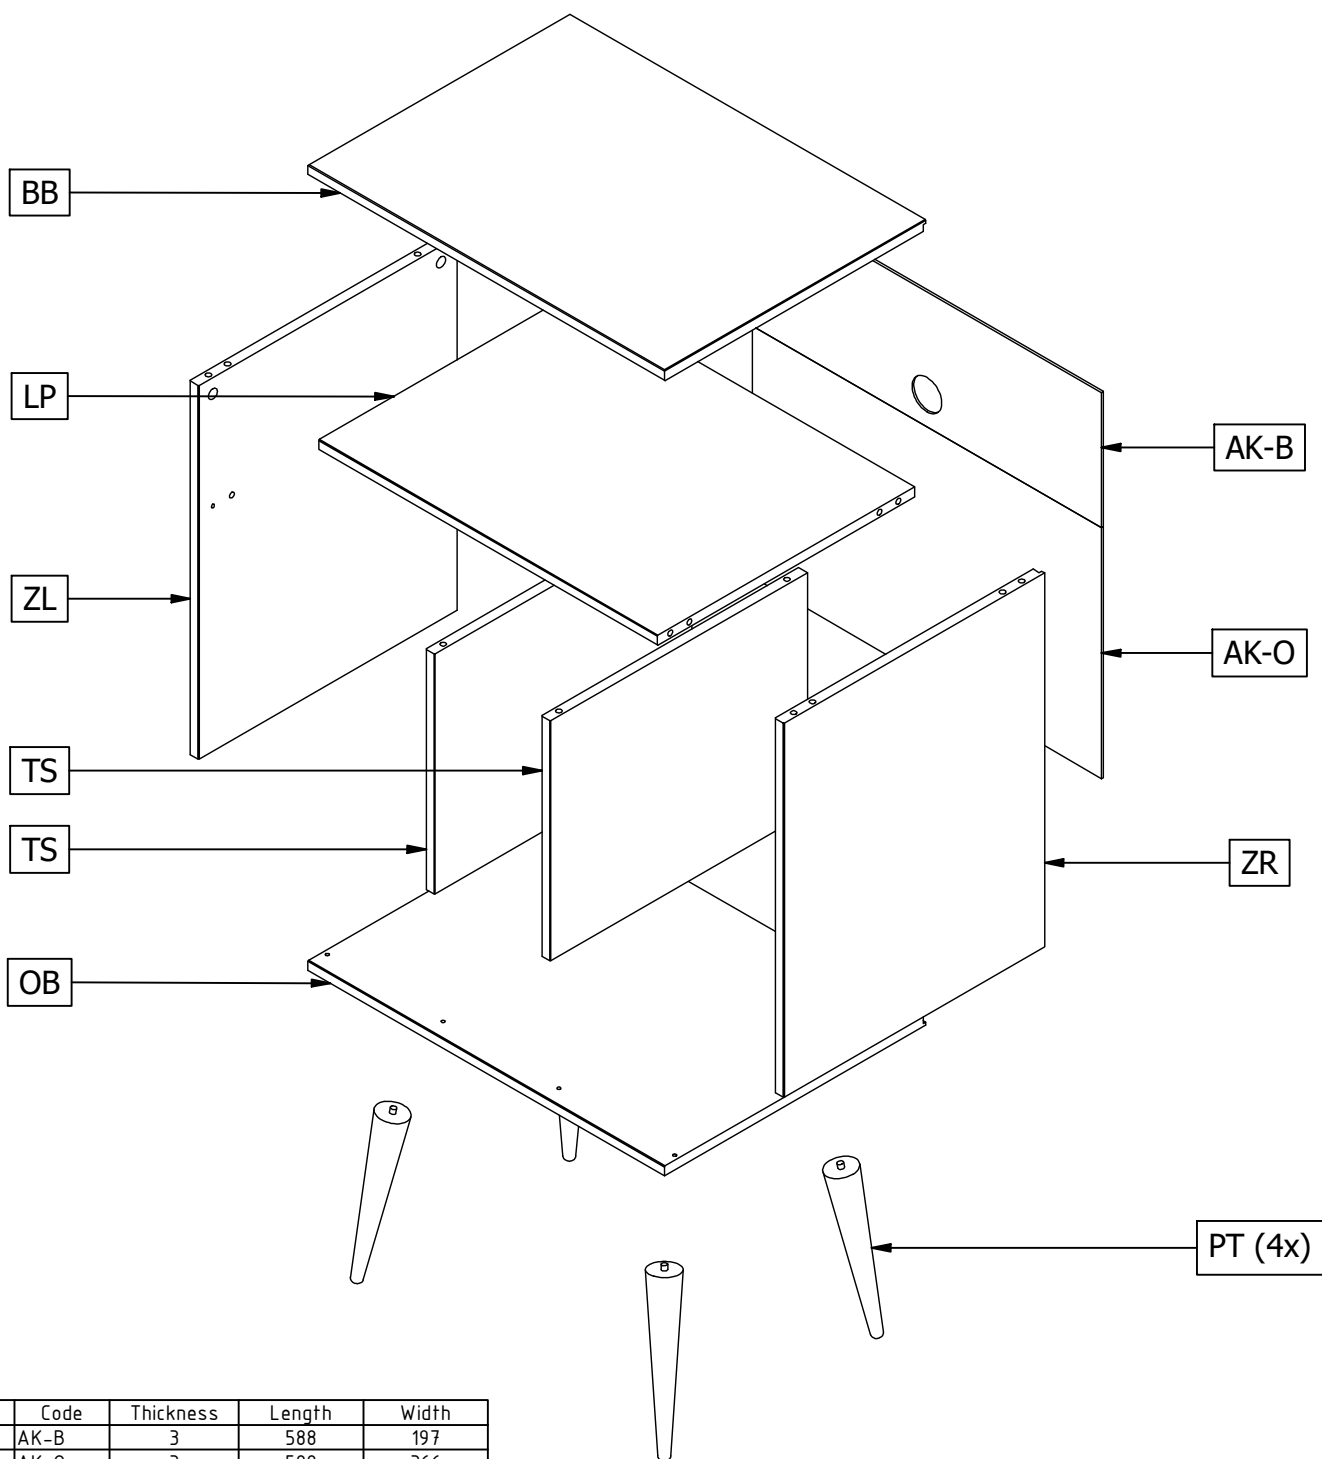


Qty	Code	Thickness	Length	Width
1	AK-B	3	588	197
1	AK-O	3	588	366
1	BB	15	600	440
1	LP	15	570	433
1	OB	15	600	440
4	PT	45	250	
2	TS	15	350	433
1	ZL	15	545	439
1	ZR	15	545	439

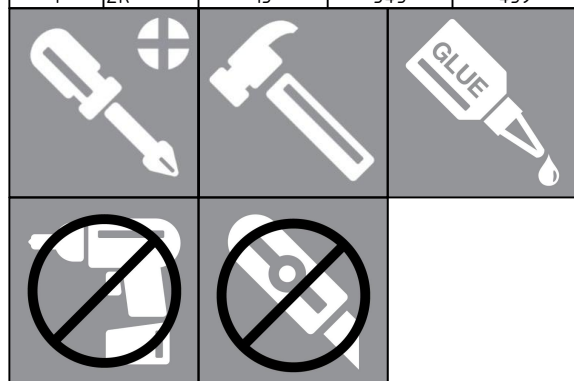


8	Ø15mm	AC000102	
8	24mm	AC000103	
4	85x66x1,75mm	AC000170	
2	3x15mm	AC000201	
16	4x16mm	AC000204	
8	5x40mm	AC000238	
25	Ø1.4x25mm	AC000316	
2	19x14mm	AC000371	
8	Ø14	AC000375	
12	8x35mm	AC000601	
1	Glue	AC000607	

1

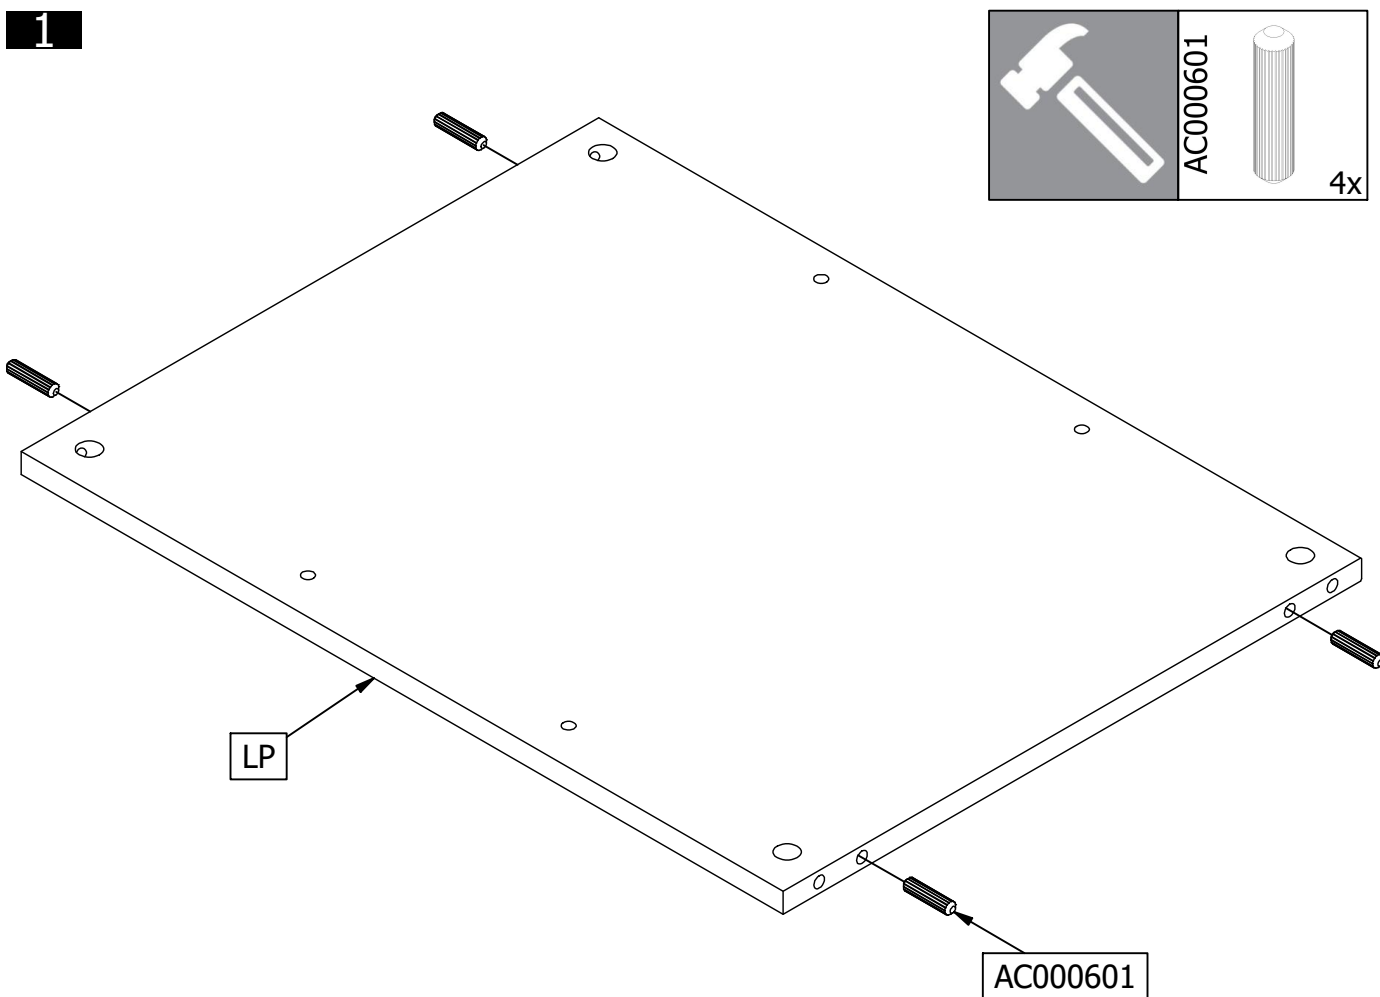



2

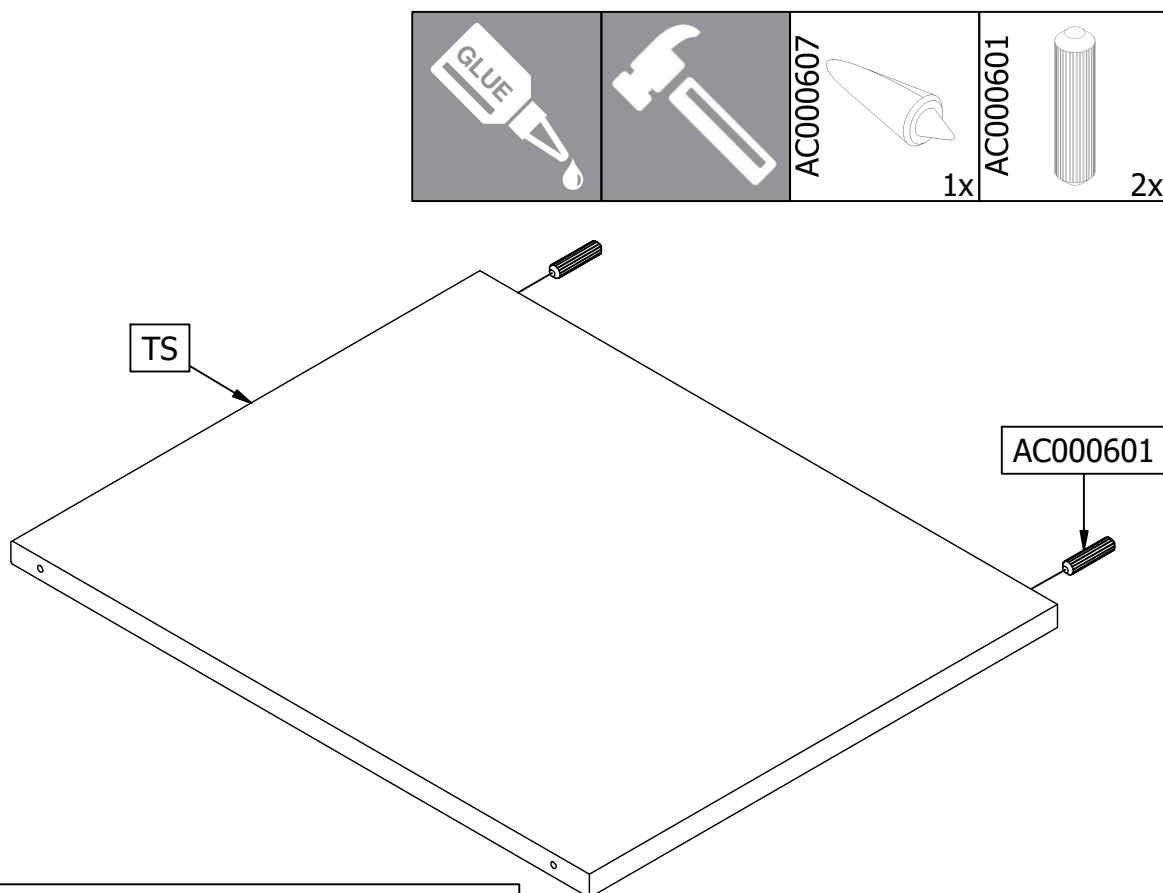

2x




Het gebruik van een klein beetje houtlijm is noodzakelijk voor een goede verbinding
 Für eine stabile Verbindung ist ein bisschen Holzleim erforderlich
 Un peu de colle à bois est nécessaire pour un assemblage solide
 The use of a little wood glue is necessary for proper connection

3


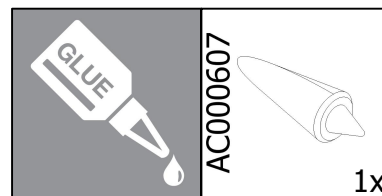
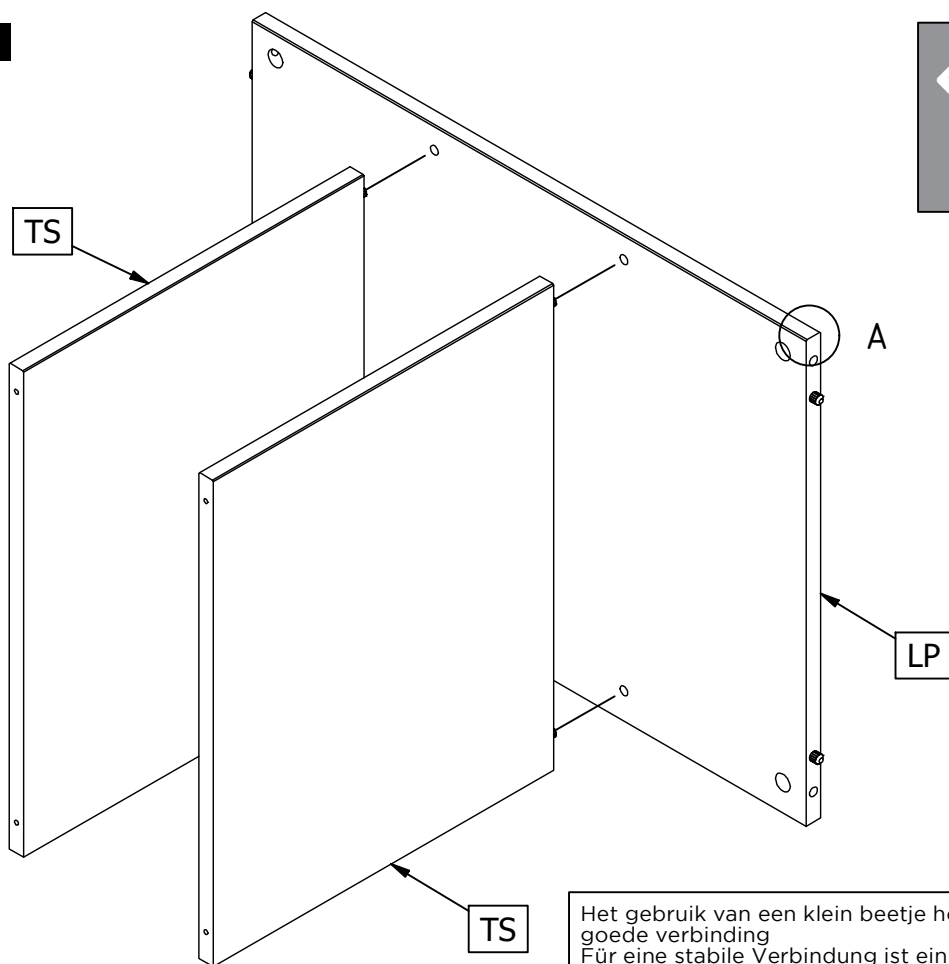


Het gebruik van een klein beetje houtlijm is noodzakelijk voor een goede verbinding
 Für eine stabile Verbindung ist ein bisschen Holzleim erforderlich
 Un peu de colle à bois est nécessaire pour un assemblage solide
 The use of a little wood glue is necessary for proper connection





4

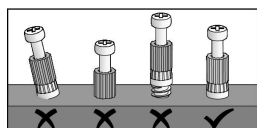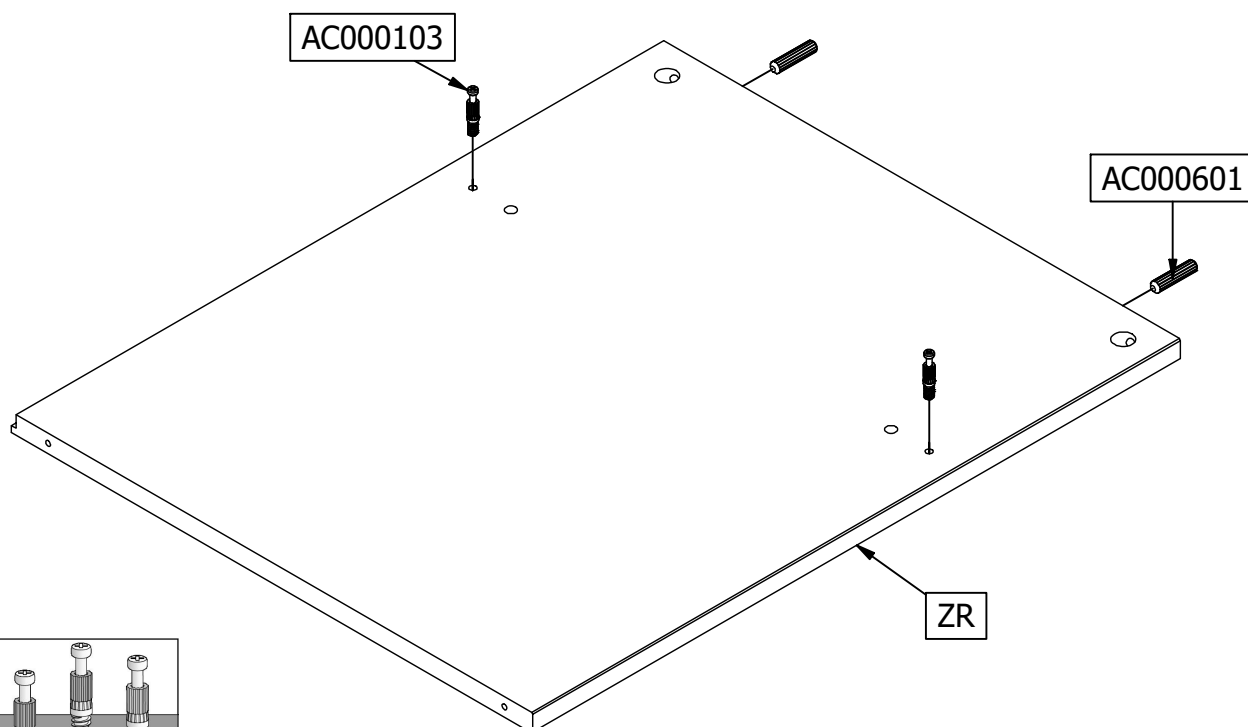
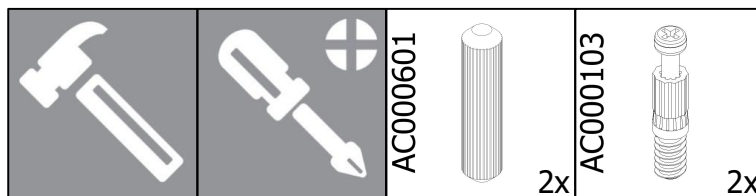





5

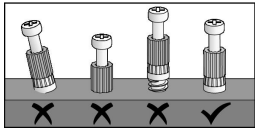
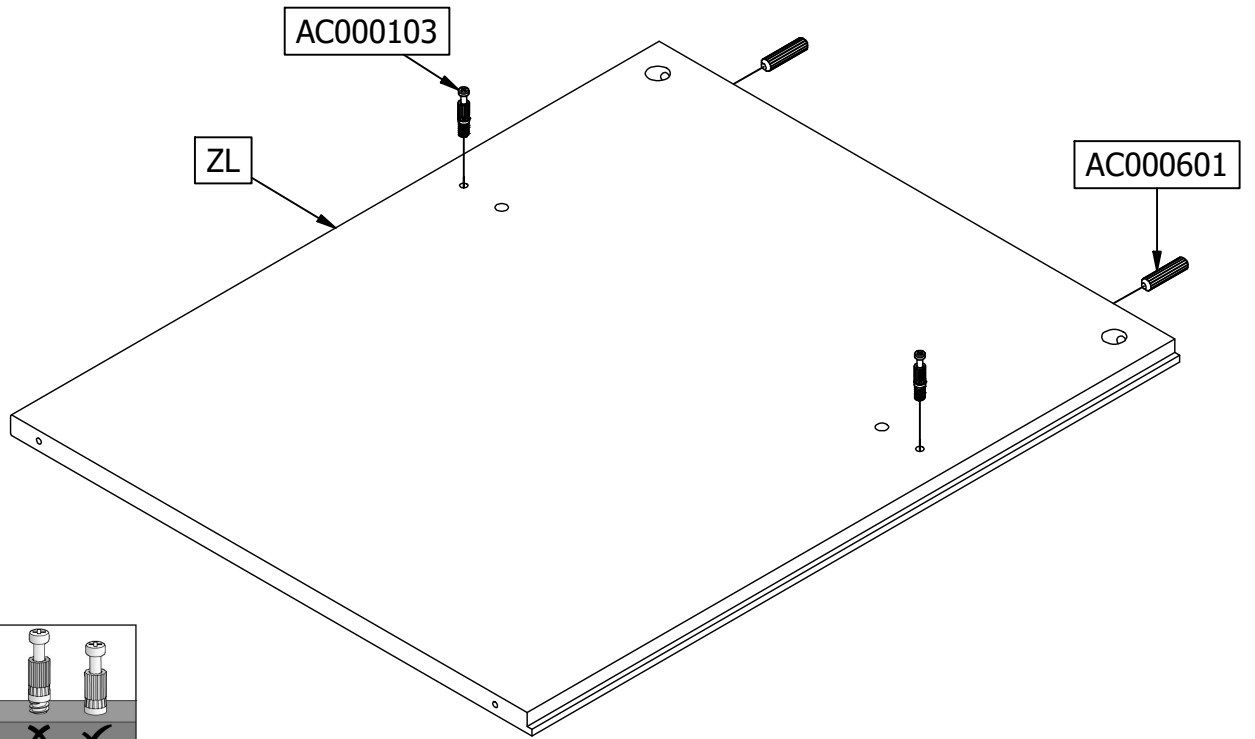
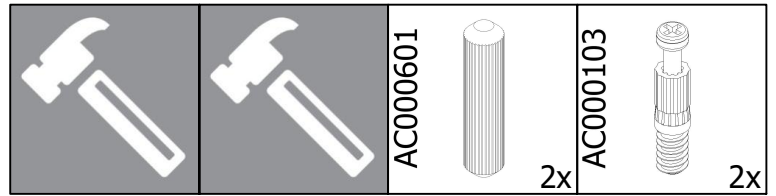


6

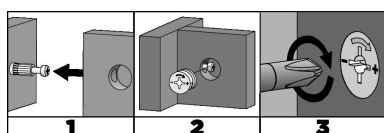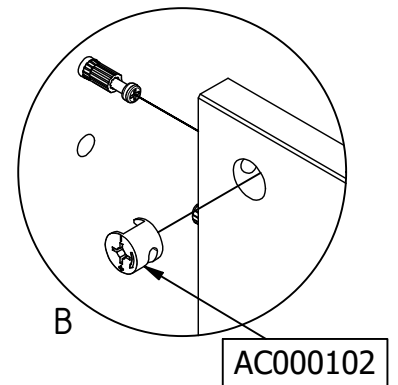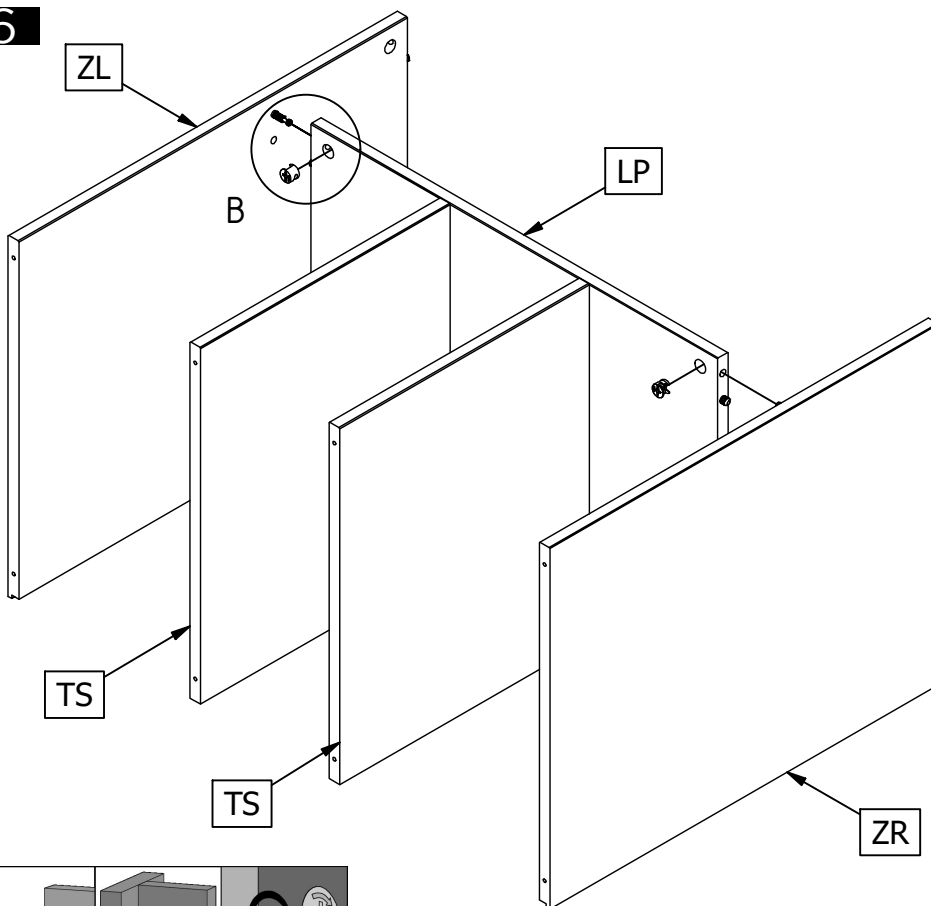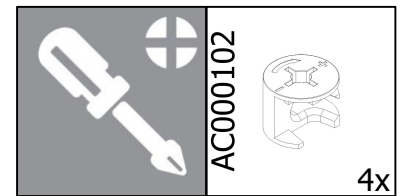


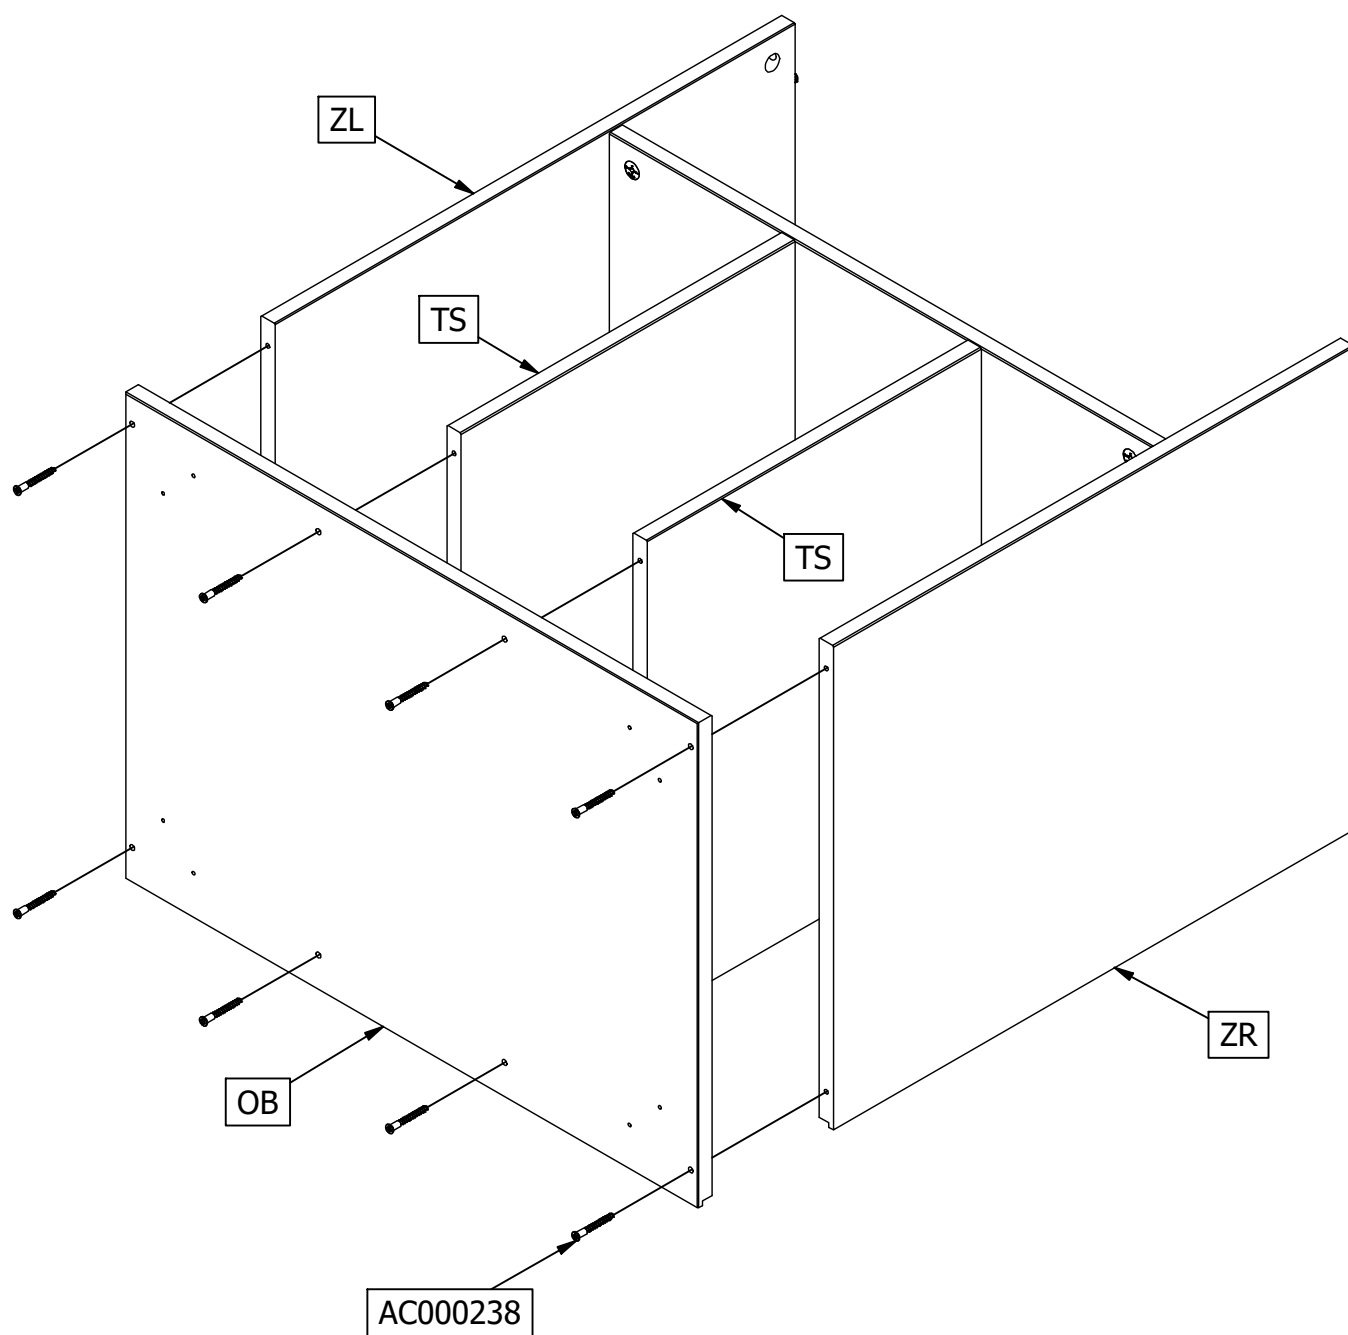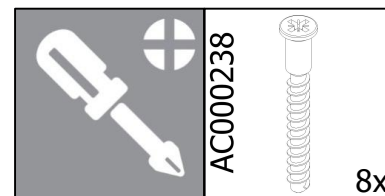

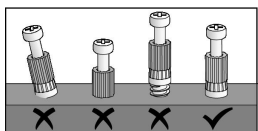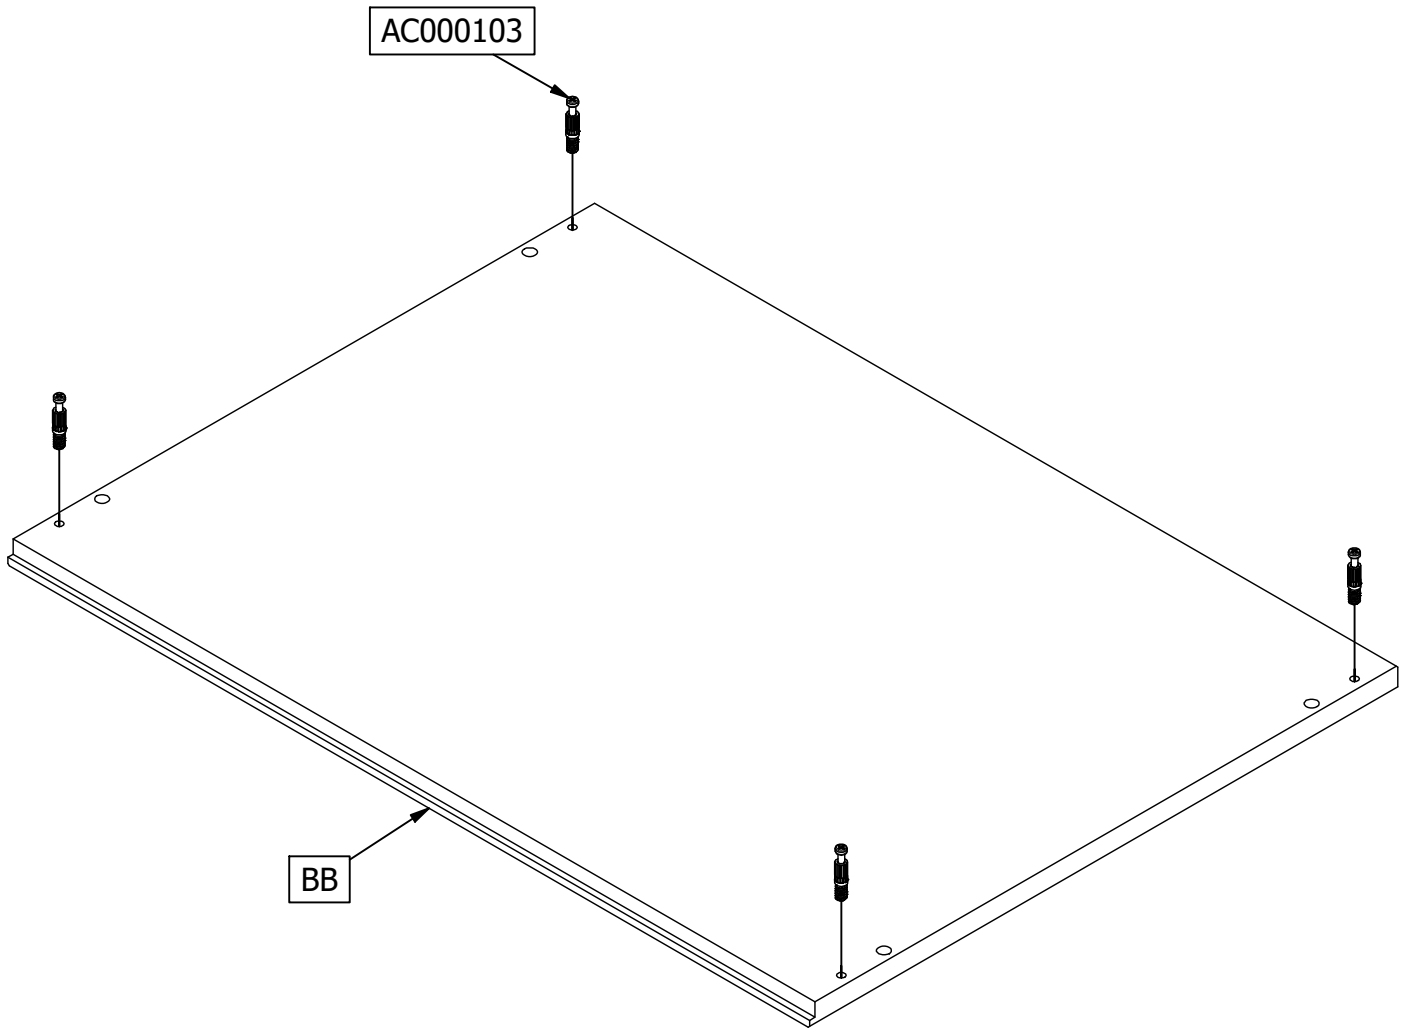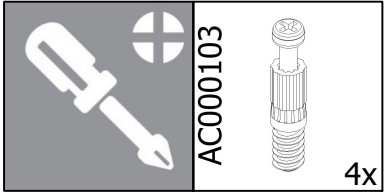


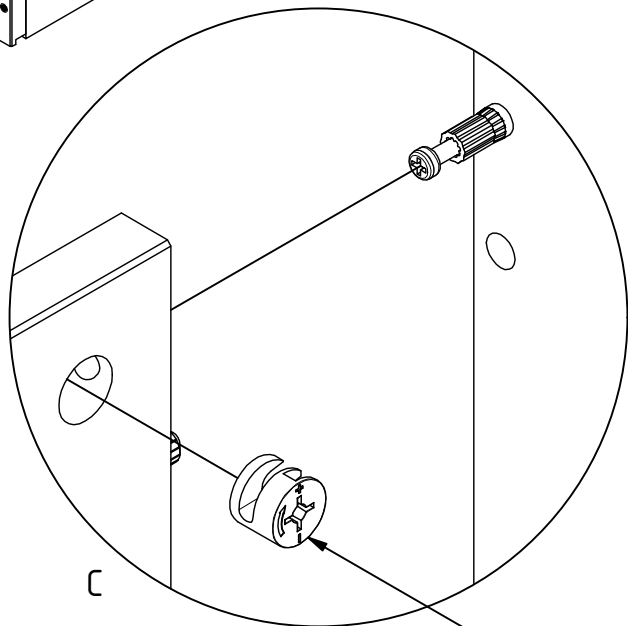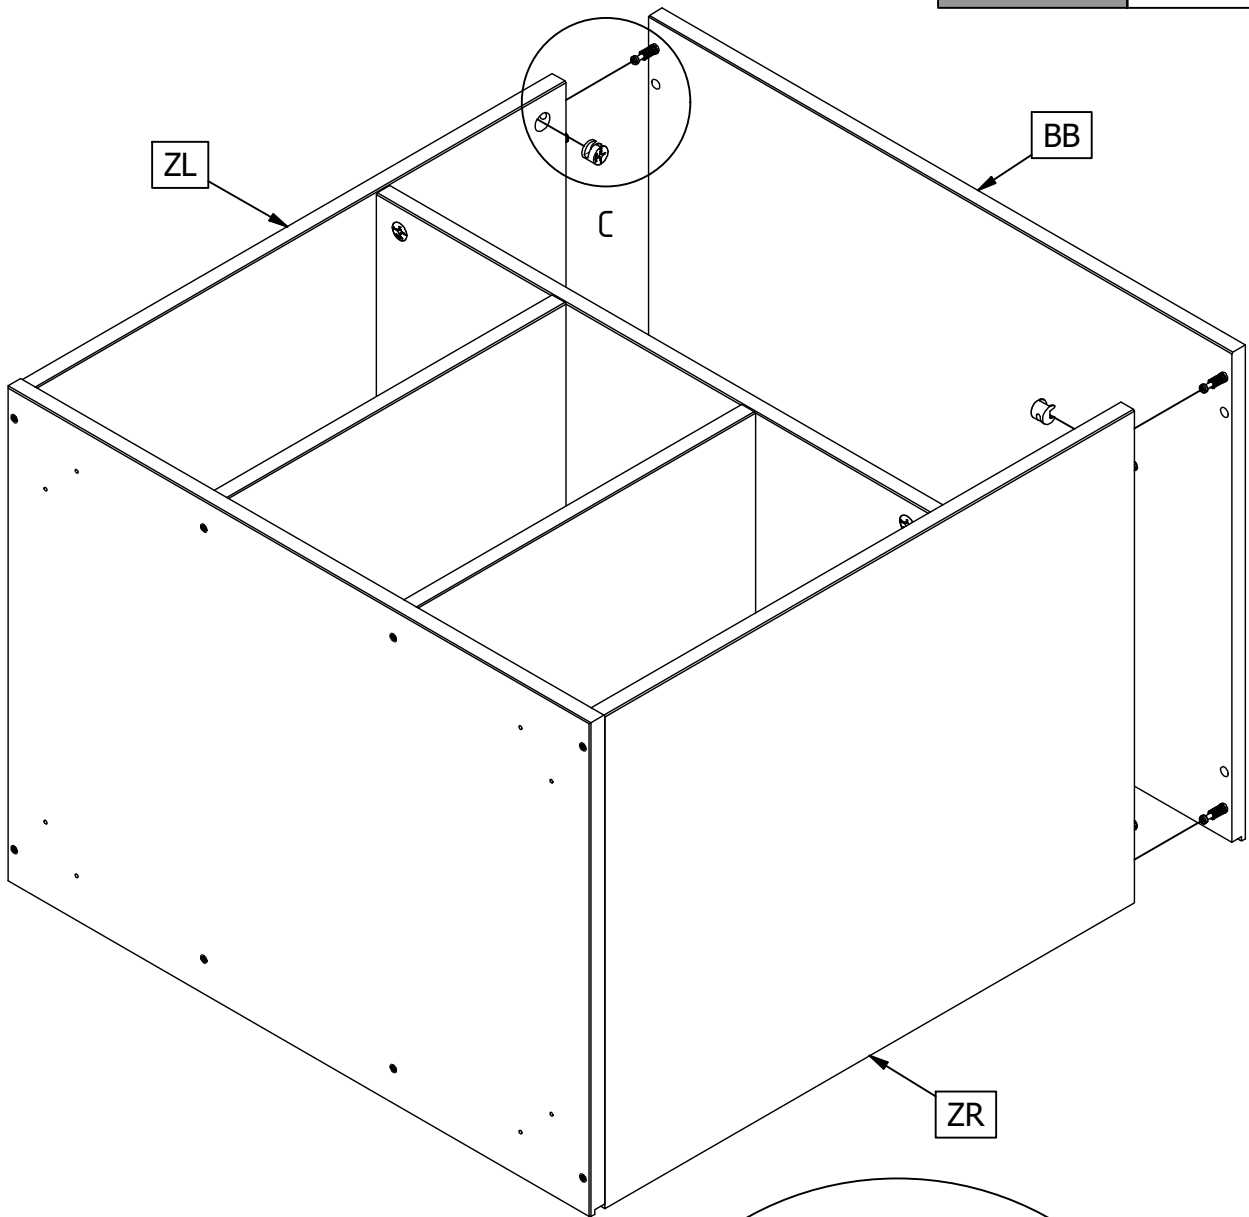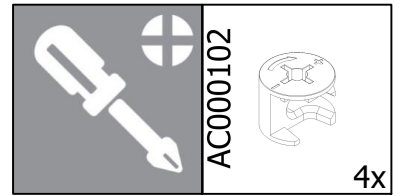




AC000102

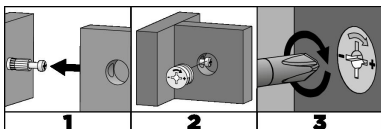


		AC000371		2x	AC000316		25x	AC000201		2X
---	---	----------	--	----	----------	---	-----	----------	---	----

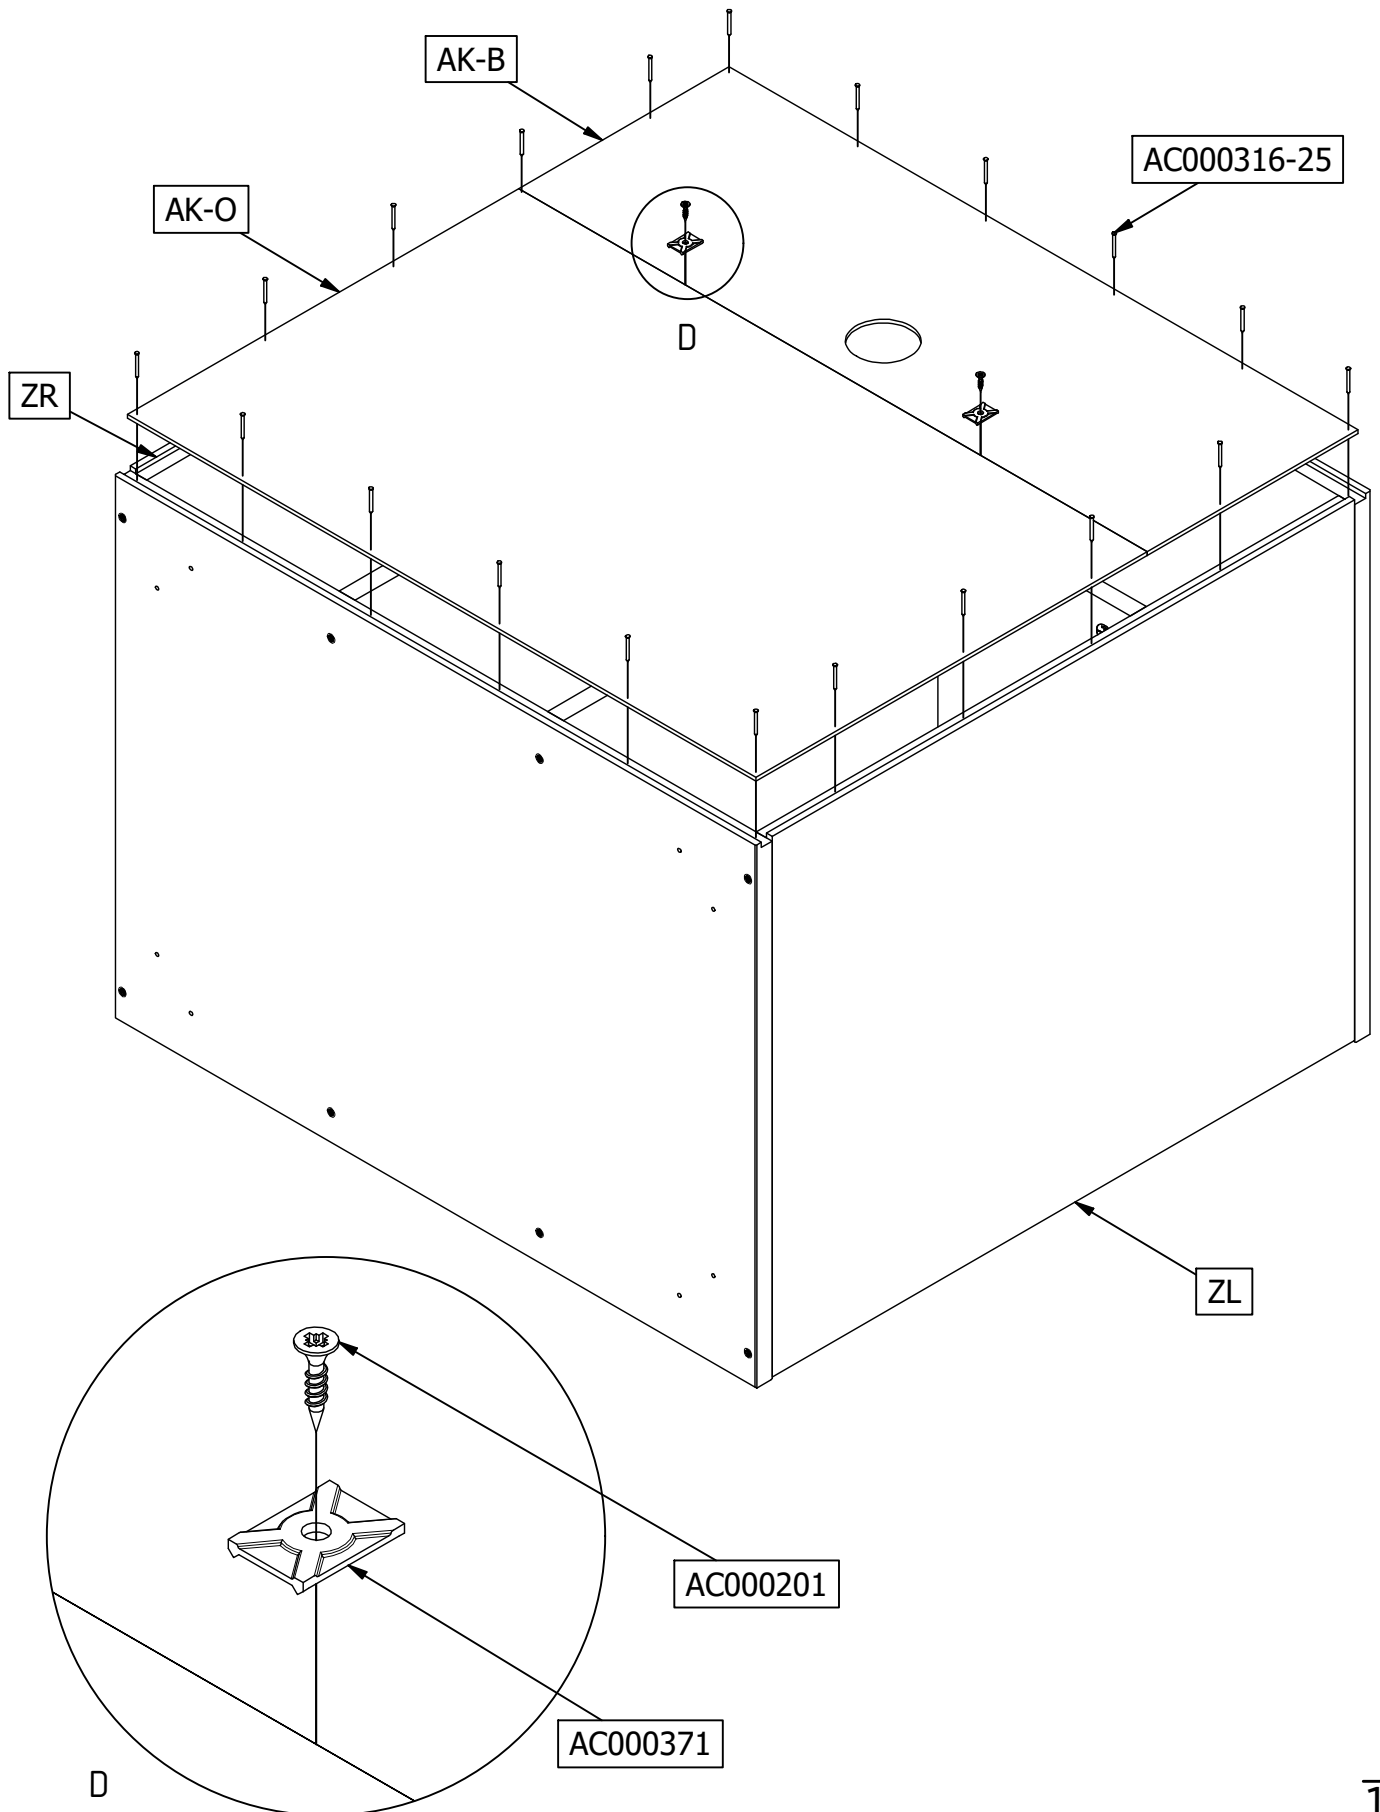

	AC000204  16x	AC000170  4x
--	--	---

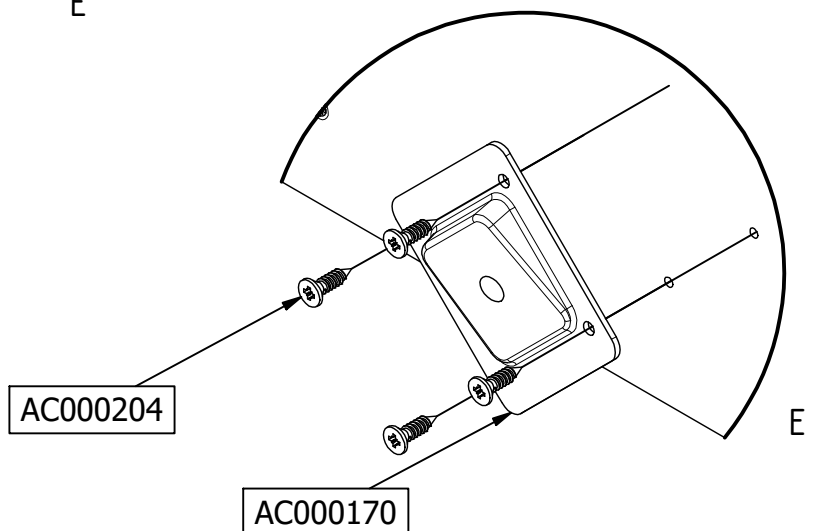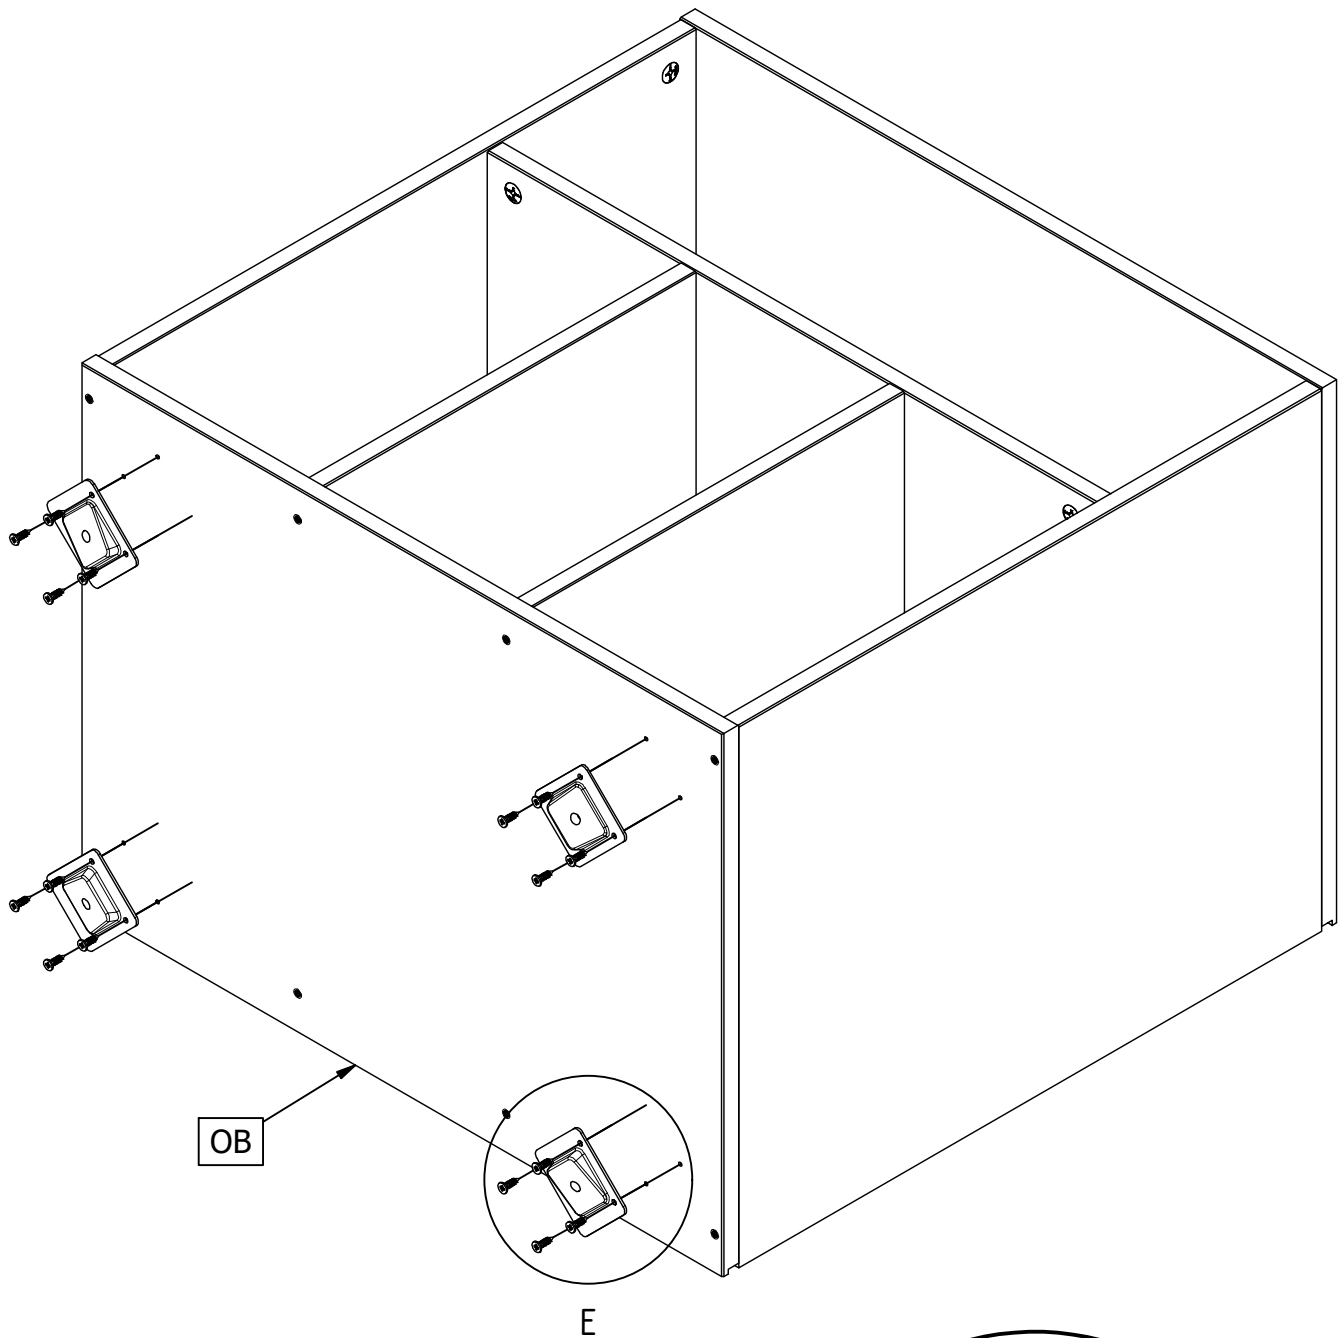

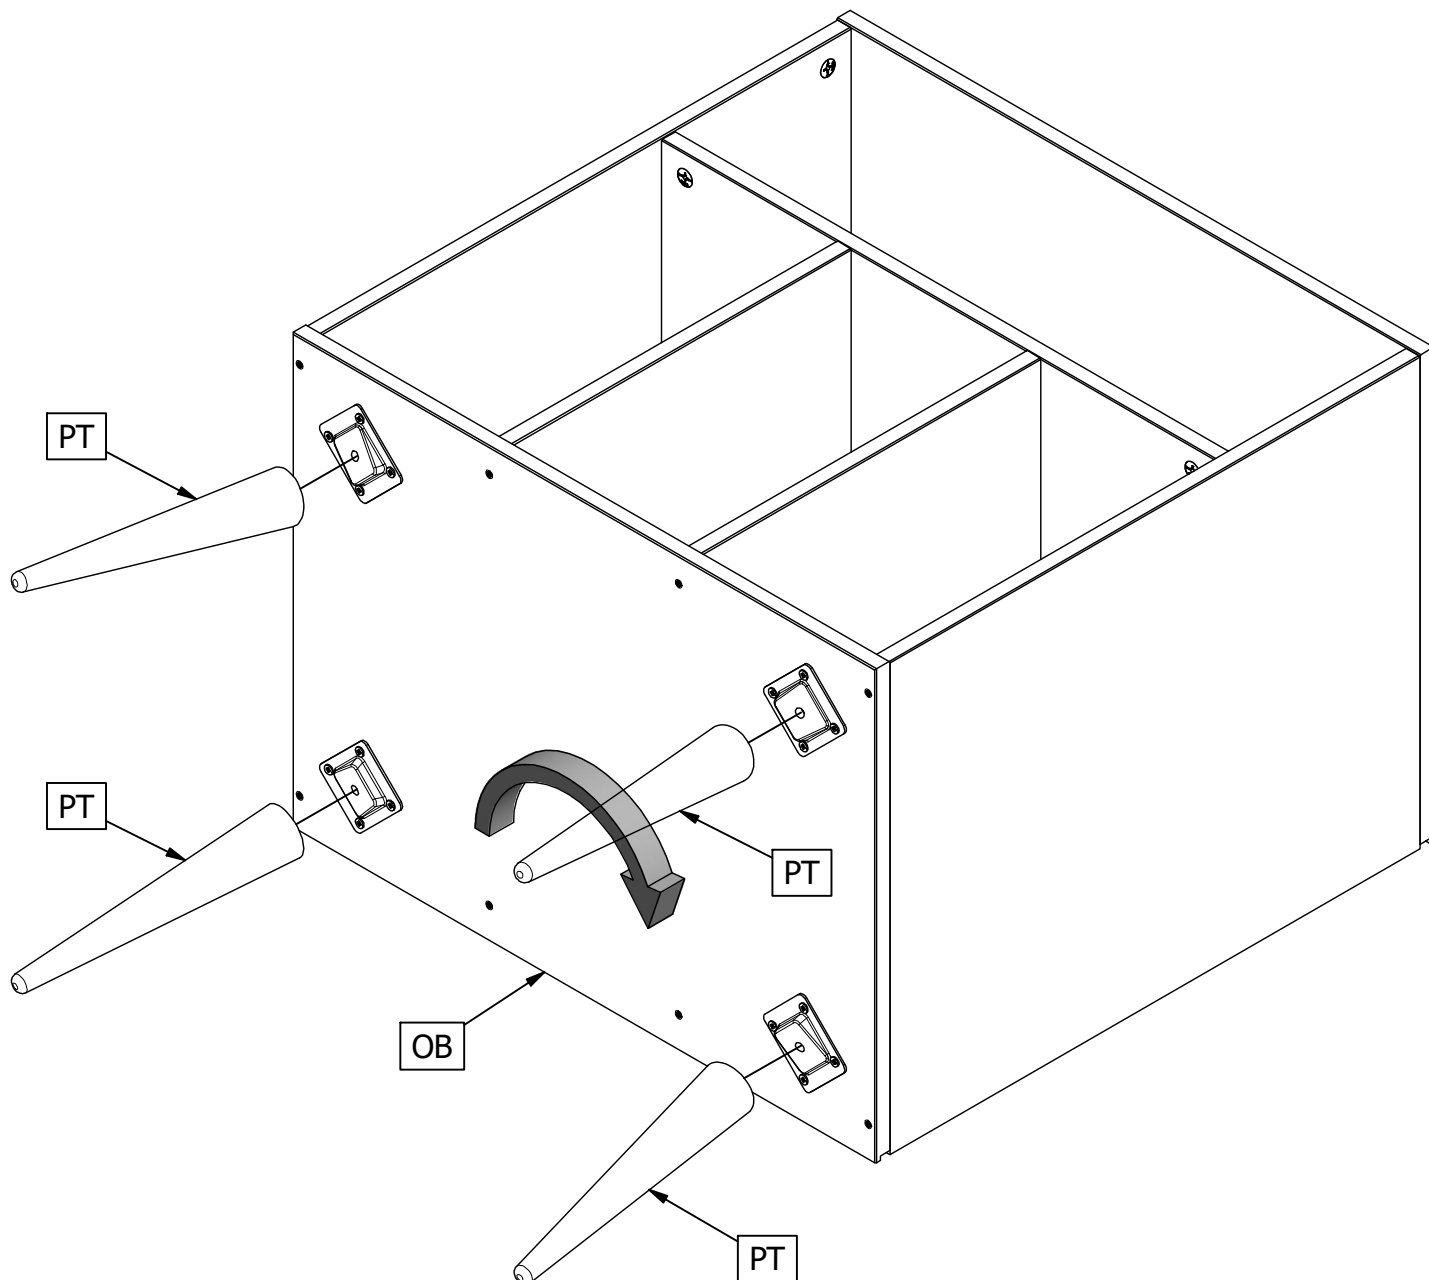

Bewaar deze handleiding • Please save this manual
 Bitte bewahren Sie diese Montageanleitung • Merci de garder la notice de montage

wood[®]
 DUTCH FURNITURE