


ASSEMBLY INSTRUCTIONS


Kit Contents:-

Allen Bolts-7Pc.




30 x 8mm

Washer-7Pc.



8mm

Allen-Key-1Pc.




5mm


Instructions:-

1. Put the Sideboard top upside down on a protective surface with Structure.
2. Match the holes on the Structure with fastener on the bottom of the Top.
3. Secure using Allen bolts, washers with Allen-Key provided.
4. Now Sideboard is ready to use.


1.

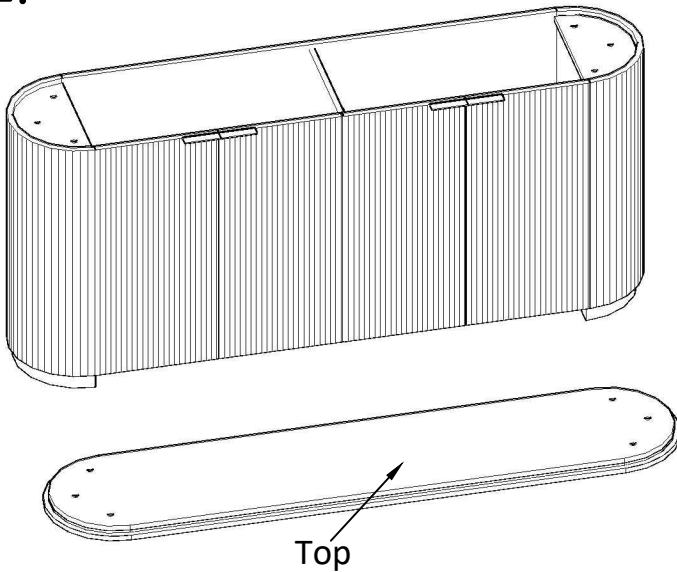

2.

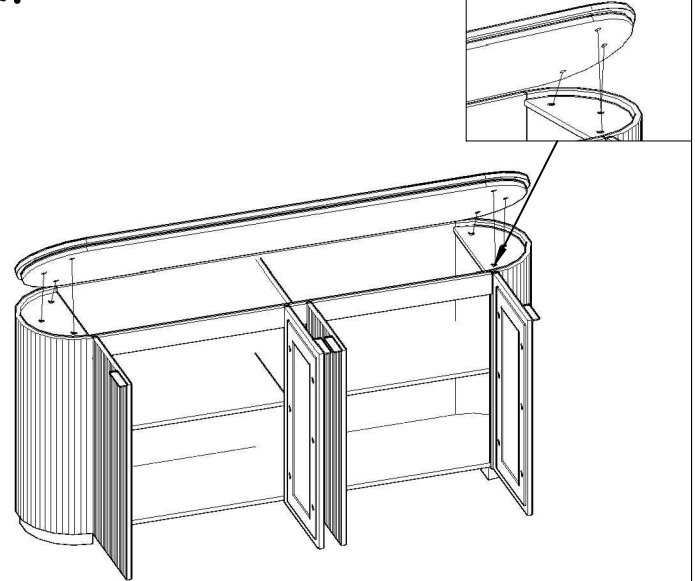

3.

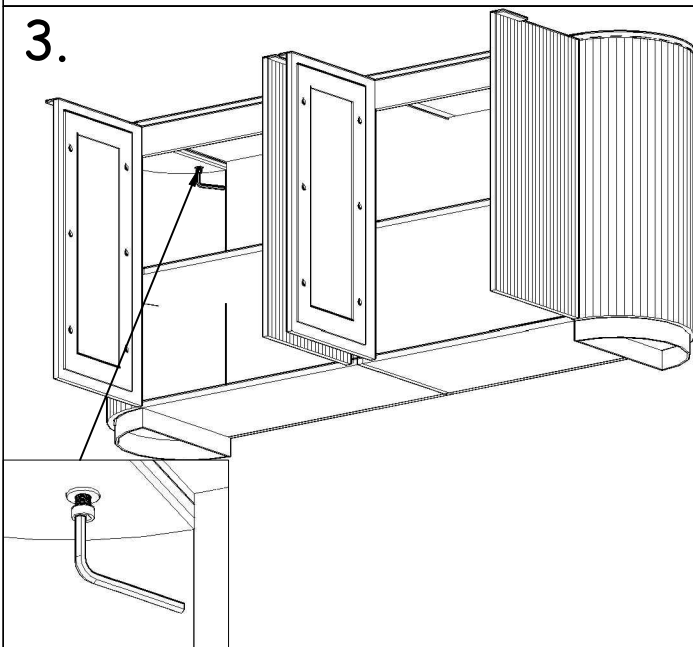

4.

