






ASSEMBLY INSTRUCTIONS
CODE NO: 214336
COLUMN WESTON

PARTS	QUANTITY
A GLASS TOP 	2
B METAL FRAME 	1

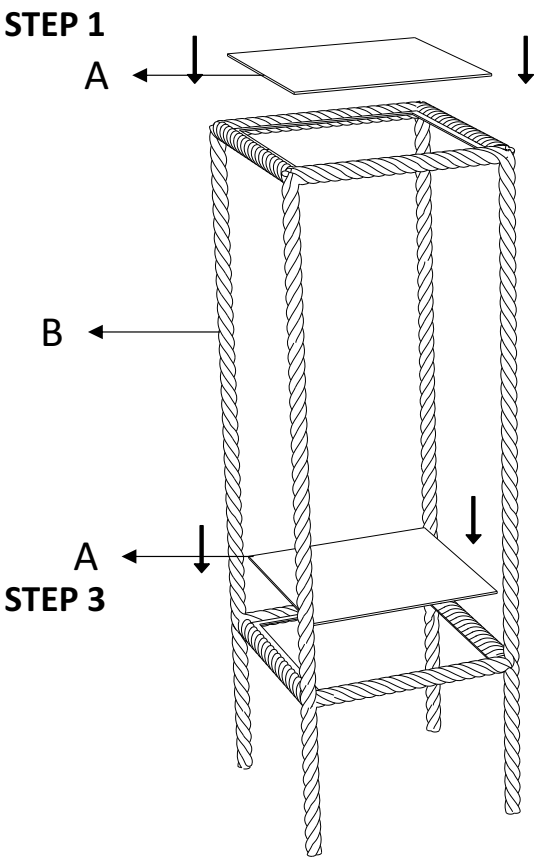

PLACE THE GLASS TOP OVER
METAL FRAME ONE BY ONE

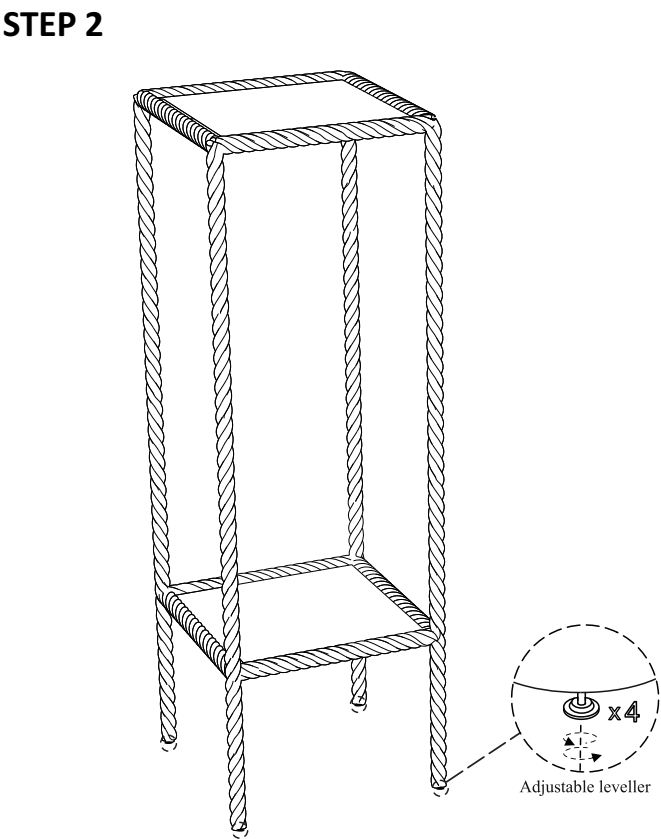

READY TO USE.

NOTES: UNIT SHOULD BE ASSEMBLED BY TWO OR MORE PERSON.