



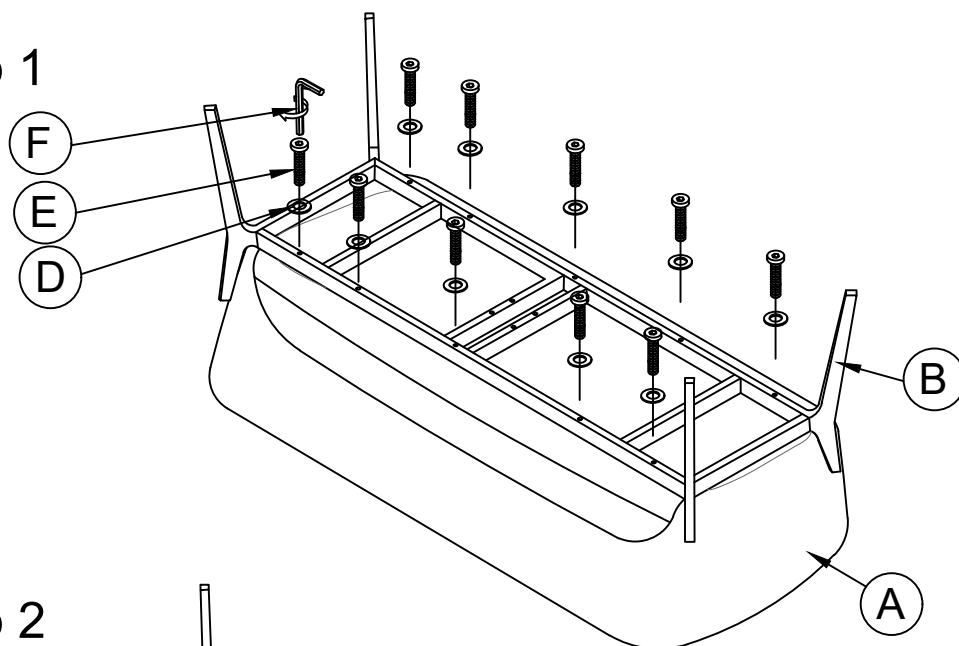


Step 1

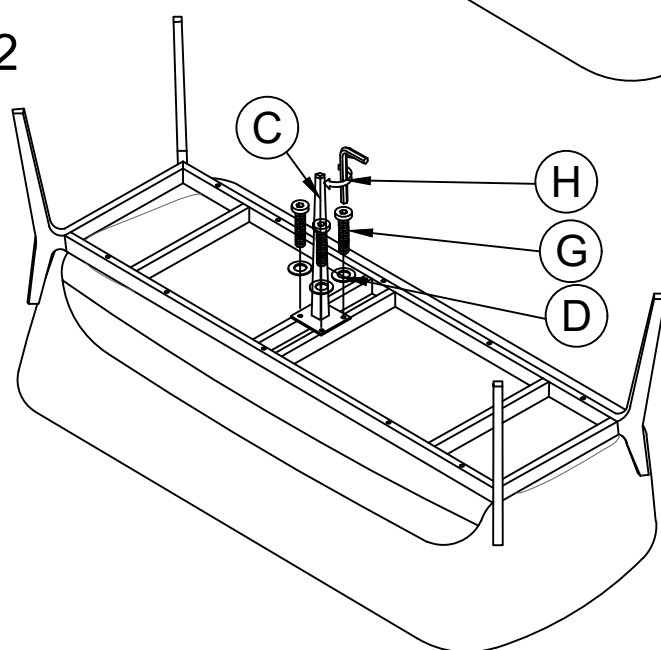

Step 2





Step 3

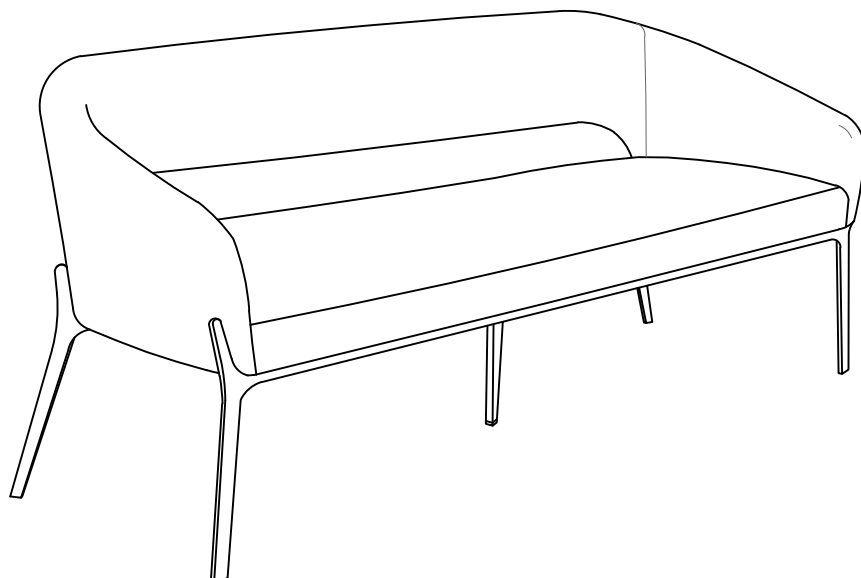

Richmond
INTERIORS

Assembly Instruction
216587/216269

NO:	Fittings	Qty:
A		1PCS
B		1PCS
C		1PCS
D	Ø16xØ6 	14PCS
E	M8xL45 	10PCS
F	5mm 	1PCS
G	M6xL15 	4PCS
H	4mm 	1PCS